


Aquafix Laboratories

Microanalysis & Filament Origins



1. Freeze included ice pack immediately after receiving kit.
2. Properly label each sample bottle and fill out corresponding online paperwork via QR code or on the right or visiting teamaquafix.com/submit
3. Fill sample bottles 1/2 full.
 - a. Unless requested, do not send duplicates of the same sample.
 - b. Foam samples should be in separate bottles. Only include a foam sample if foaming is your main concern.
4. Seal sample bottles in Ziplock bag provided. Place samples in original box with frozen ice pack.
5. Attach included shipping label over the original label and tape the box closed.
6. Call us at 888-757-9577 to schedule your free pickup.
 - a. Call prior to 9 am CST to arrange same day pickup Monday - Wednesday

NOTE: The \$400 fee includes two samples and return shipping. Additional sample bottles are billed at \$100 each.

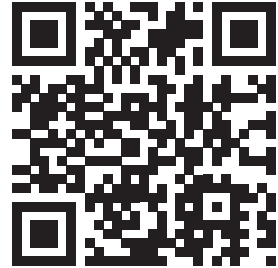

SCAN ME

Use the QR code above with your phone camera, or visit teamaquafix.com/submit to fill out your sample info form online.



AQUAFIX

PO Box 8682
Madison, WI
53708-8682

P:888.757.8577
F: 866.636.1864

support@teamaquafix.com
www.teamaquafix.com